

PROGRAMMING ENTONE REMOTE TO TV (URC-4031 (NOVA) ONLY)



Program Remote to TV

1. Turn TV on
2. Press "TV" mode
3. Press and hold "SETUP" key until LED blinks twice
4. Press keys "9" – "9" – "1"
5. Press "Power" key
6. Press "CH +" repeatedly until device shuts off
7. Press and hold "SETUP" key until LED blinks twice to save the working code

Power the TV ON/Off in STB mode (Punch Through Procedure)

1. Press TV mode
2. Press and hold "SETUP" key until LED blinks twice
3. Press keys "9" – "7" – "8"
4. Press "TV" key
5. Press "POWER" key
6. Press "STB" key
7. Press and hold "SETUP" key until LED blinks twice

Reset Punch Through Procedures (the procedure above)

1. Press and hold "SETUP" key until LED blinks twice
2. Press keys "9" – "7" – "8"
3. Press and hold "SETUP" key until LED blinks twice